

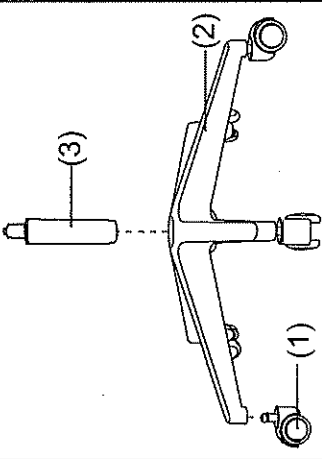
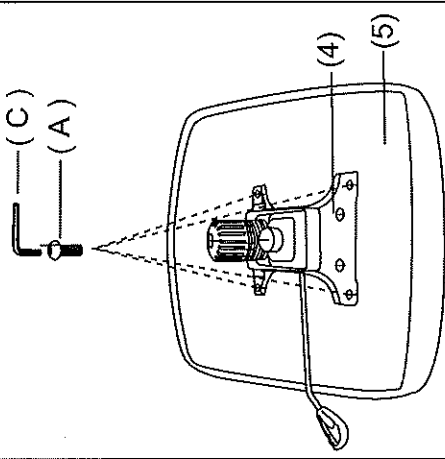
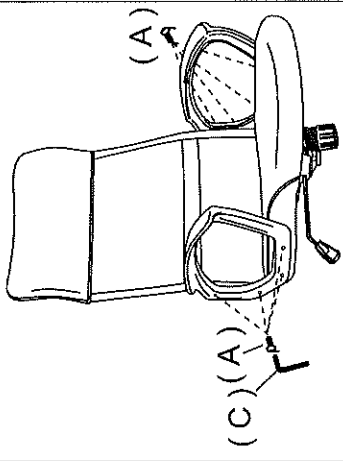


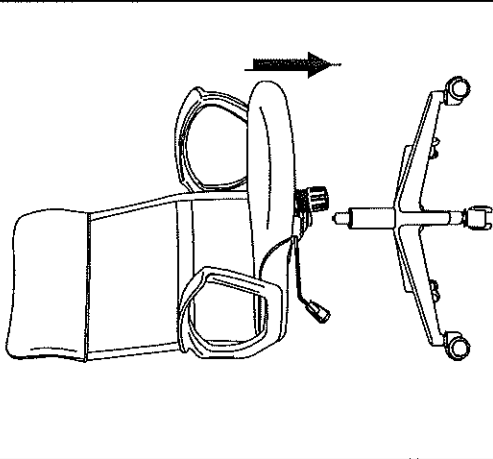
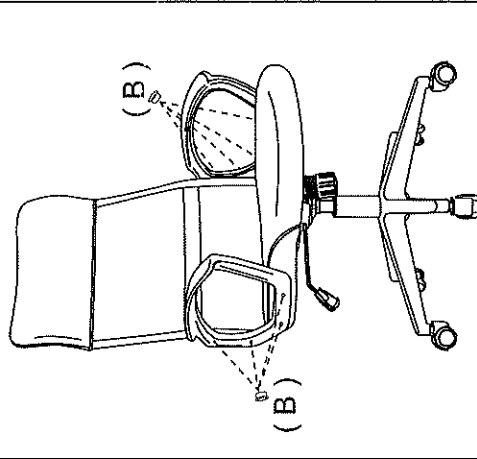
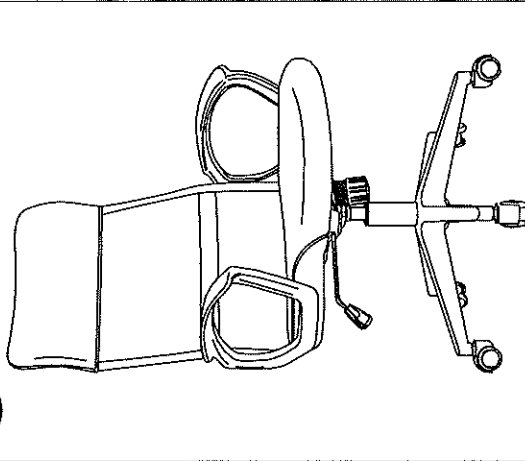


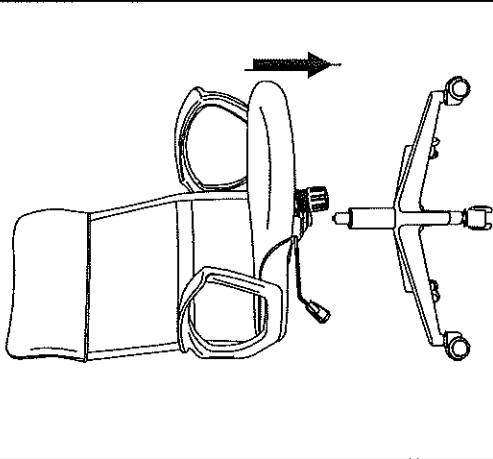
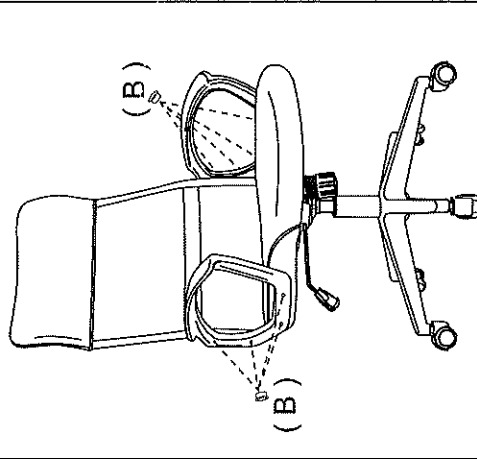
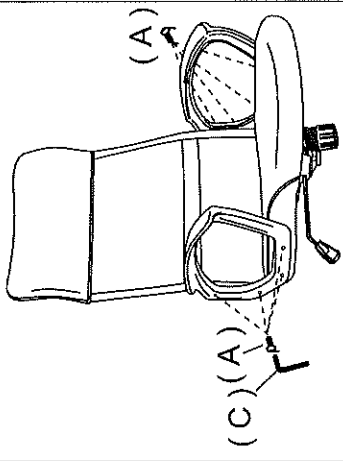

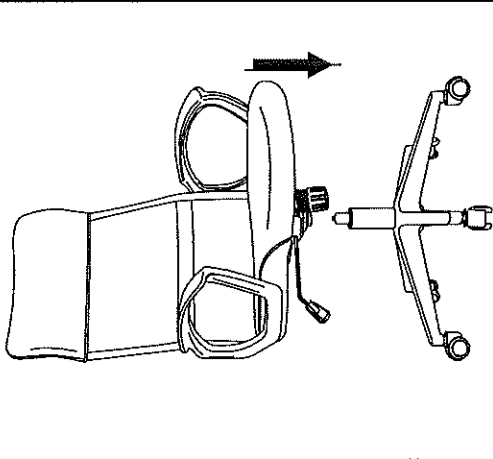
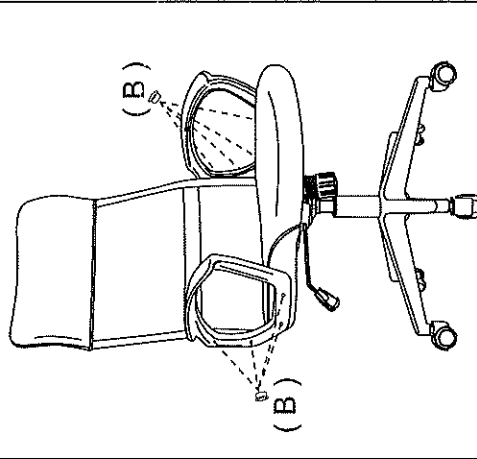
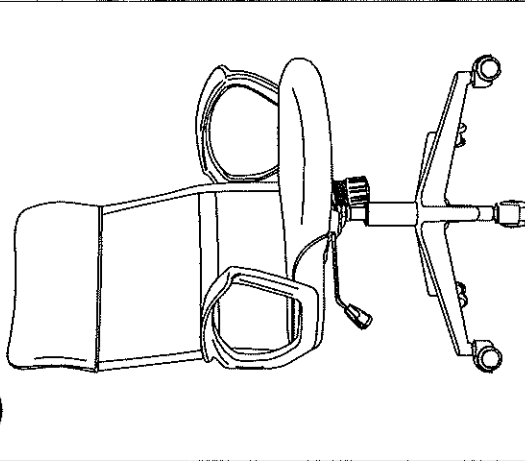

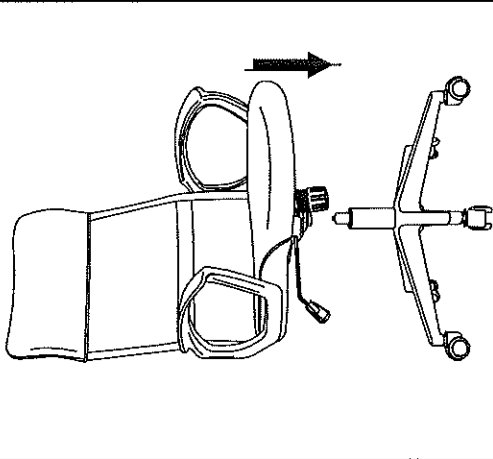
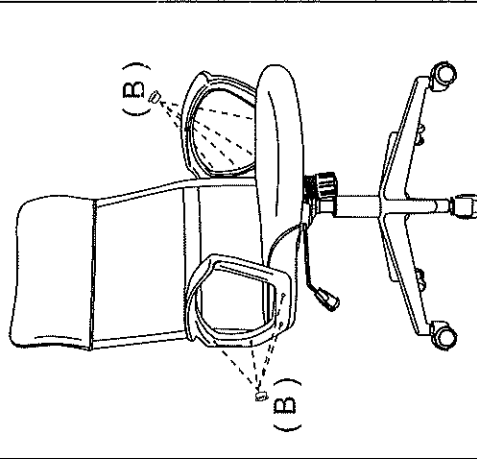
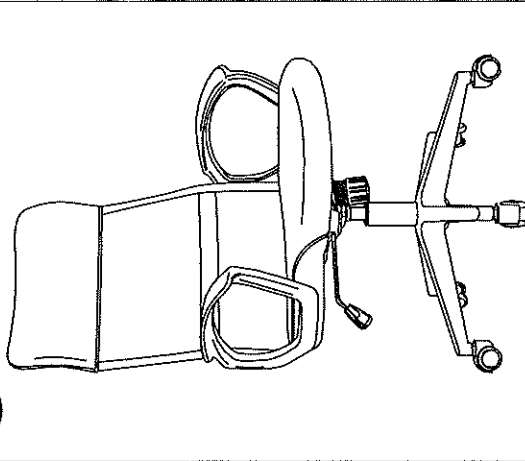
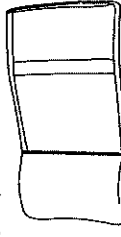
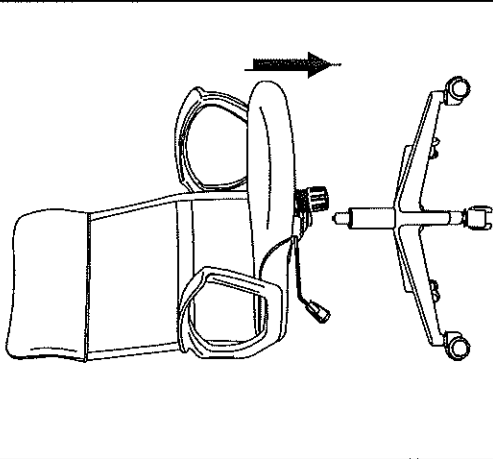
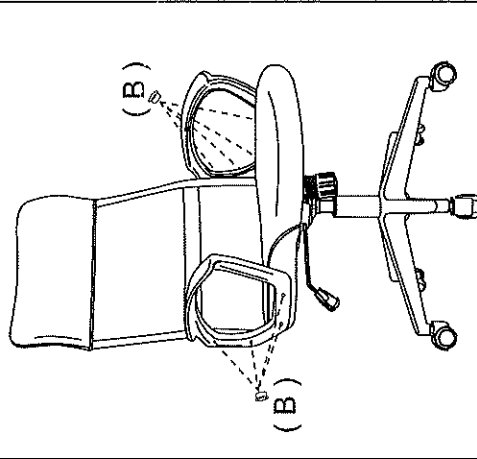
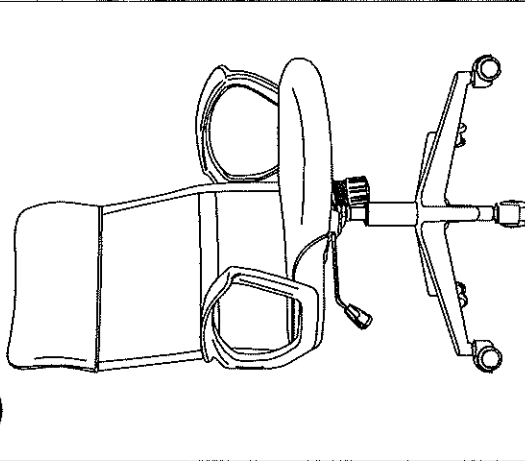

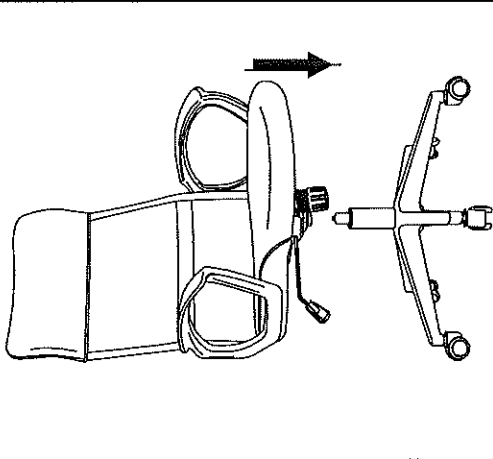
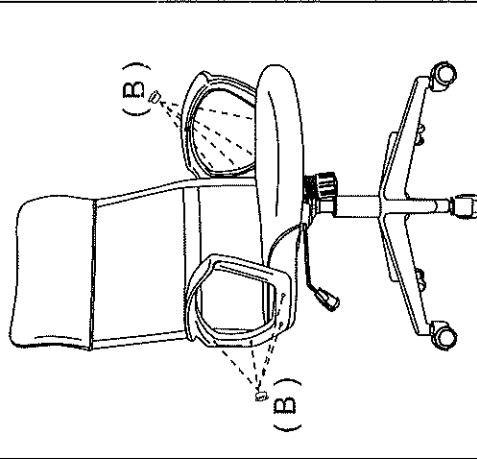


# INSTRUCCION DE MONTAJE 1014M

<p>(1) x 5</p> 	<p>(A) x 12</p>  <p>M6x20mm</p>	<p><b>1</b></p> 	<p><b>2</b></p> 	<p><b>3</b></p> 
<p>(2) x 1</p> 	<p>(B) x 8</p> 	<p><b>4</b></p> 	<p><b>5</b></p> 	<p><b>6</b></p> 
<p>(3) x 1</p> 	<p>(C) x 1</p> 	<p><b>4</b></p> 	<p><b>5</b></p> 	<p><b>3</b></p> 
<p>(4) x 1</p> 		<p><b>4</b></p> 	<p><b>5</b></p> 	<p><b>6</b></p> 
<p>(5) x 1</p> 		<p><b>4</b></p> 	<p><b>5</b></p> 	<p><b>6</b></p> 
<p>(6) x 1</p> 		<p><b>4</b></p> 	<p><b>5</b></p> 	<p><b>6</b></p> 
<p>(7) x 1</p> 		<p><b>4</b></p> 	<p><b>5</b></p> 	<p><b>6</b></p> 