

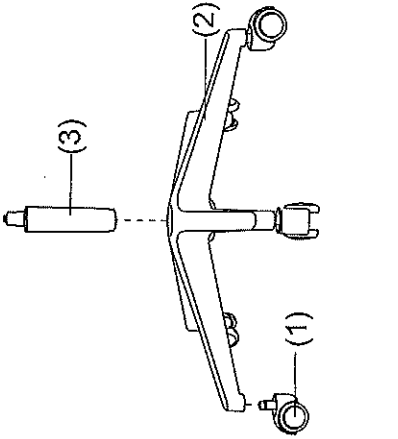


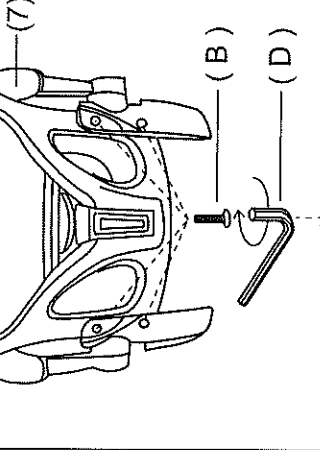


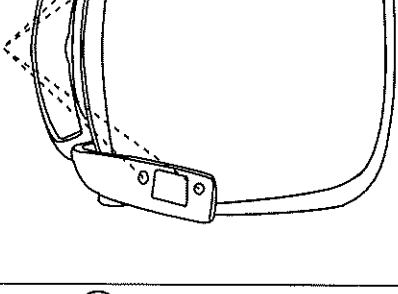

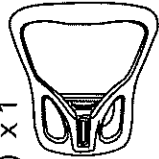

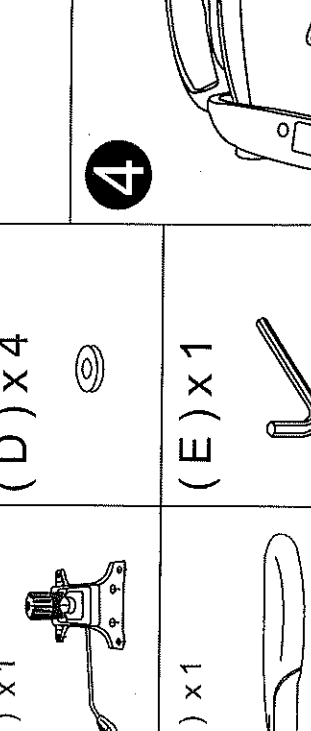

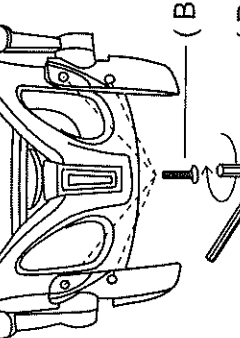
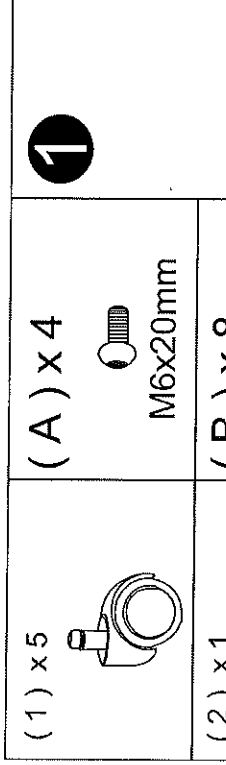


INSTRUCCION DE MONTAJE 1030

<p>(1) x 5</p> 	<p>(A) x 4</p>  <p>M6x20mm</p>	<p>1</p> 	<p>(2) x 1</p> 	<p>(B) x 8</p>  <p>M6x30mm</p>	<p>2</p> 	<p>(3) x 1</p> 	<p>(4) x 4</p> 	<p>3</p> 	<p>(5) x 1</p> 	<p>(6) x 1</p> 	<p>(7) x 1</p> 	<p>4</p> 	<p>(5) x 1</p> 	<p>5</p> 	<p>6</p> 
--	---	---	--	---	--	--	--	---	--	--	--	--	--	---	---